

Table of 4-key keyboards definitions **V135**

KB0401	Source 1		Source 2
	Off		Source 3
KB0402	Source 1		Source 2
	Off		Blank
KB0403	Source 1		Vol Up
	Off		Vol Down
KB0404	Source 1		Freeze
	Off		AV Mute
KB0405	Source 1		Source 2
	Off		Disp. On
KB0406	Disp. On		Source 1
	Off		Source 2
KB0407	Source 1		Source 2
	Off		Screen U/D
KB0408	Disp On (no Source)		Vol Up
	Off		Vol Down
KB0409	Source 1		User String A
	Off		User String B
KB040A	Disp. On		Source 1
	Off		AV Mute

Table of 6-key keyboards definitions

KB0601	Source 1	Source 2	Vol Up
	Off	Blank/Mute	Vol Down
KB0602	Source 1	Source 2	Source 3
	Off	Blank/Mute	Freeze
KB0603	Source 1	Source 2	Source 3
	Off	Disp. On	Source 4
KB0604	Disp. On	Source 1	Vol Up
	Off	Source 2	Vol Down
KB605	Source 1	Source 2	Vol Up
	Off	Disp. On	Vol Down
KB606	Source 1	Source 2	Vol Up
	Off	Source 3	Vol Down
KB0607	Source 1	Source 2	Source 3
	Off	Disp. On	Blank/Mute
KB0608	Disp. On	Source 1	Source 2
	Off	Source 3	Source 4
KB0609	Source 1	Source 2	Source 3
	Off	Blank/Mute	Source 4
KB060A	Source 1	Source 2	Source 3
	Off	Screen	Source 4
KB060B	Source 1	TV Chan Up	Vol Up
	Off	TVChan Down	Vol Down
KB060C	Source 1	Source 2	Source 3
	Off	Freeze	Source 4

KB060D	Source 1	Source 2	TV Chan Up
	Off	Source 3	TV Chan Down
KB060E	Source 1	Source 2	Pixel Align
	Off	Blank/Mute	Freeze
KB060F	Source 1	Source 2	Source 3
	Off	Pixel Align	Source 4
KB0610	Source 1	Source 2	Source 3
	Off	Pixel Align	Blank/Mute
KB0611	Source 1	Freeze	Vol Up
	Off	Blank/Mute	Vol Down
KB0612	Source 1	Screen up/dn	Vol up
	Off	Mute on/off	Vol dn
KB0613	On	Source 1	Source 2
	Off	Screen U/D	Source 3
KB0614	Source 1	Source 2	Source 3
	Off	Screen U/D	Blank On/Off
KB0615	Disp. On	Source 1	Vol Up
	Off	Blank/Mute	Vol Down
KB0616	Source 1	Source 2	Vol Up
	Off	Freeze	Vol Down
KB0617	Disp On	Source 1	Source 2
	Off	Screen U/D	User Relay C
KB0618	Disp. On	Vol Up	Source 1
	Off	Vol Down	Source 2

(This suits a TV like Hisense LCD 2, RC5 with a source key that rolls between sources. No OK key is needed.)

KB0619	Disp On	Source 1	Source 2
	Off	Blank/Mute	Freeze
KB061A	Source 1	Source 2	Source 3
	Off	Source 4	Source 5
KB061B	Disp On	Source 1	Aux IR Rpt
	Off	Source 2	Aux IR Rpt
KB061C	Disp On	Source 1	Aux IR Rpt
	Off	Aux IR	Aux IR Rpt
KB061D	On	Source 1	Source 2
	Off	Screen U/D	AV Mute
KB061E	Disp On	Source 1	Source 2
	Off	Source 3	Freeze
KB061F	Disp. On	Vol Up	Vol Down
	Off	Source 1	Source 2
KB0620	On	Source 1	Source 2
	Off	Source 3	AV Mute
KB0621	Source 1	TV Chan Up	Aux IR
	Off	TVChan Down	Aux IR
KB0622	On	Vol Up	Freeze
	Off	Vol Down	Source 1
KB0623	Source 1	Source 2	Aux IR
	Off	Aux IR	Aux IR

Use for portrait versions

Table of 8-key keyboards definitions

KB0801	Source 1	Source 2	Source 3	Vol Up
	Off	Source 4	Blank/Mute	Vol Down
KB0802	Source 1	Source 2	Source 3	Source 4
	Off	Source 5	Source 6	Source 7
KB0803	Source 1	Source 2	Source 3	Source 4
	Off	Disp. On	Source 5	Source 6
KB0804	Source 1	Source 2	Source 3	Vol Up
	Off	Blank/Mute	Freeze	Vol Down
KB0805	Source 1	Source 2	Source 3	Vol Up
	Off	Disp. On	Freeze	Vol Down
KB0806	Source 1	Source 2	Source 3	Vol Up
	Off	User Relay	User Relay	Vol Down
KB0807	Disp. On	Source 1	Source 2	Vol Up
	Off	User Relay	Source 3	Vol Down
KB0808	Source 1	Source 2	Source 3	Vol Up
	Off	Disp. On	Blank/Mute	Vol Down
KB0809	Source 1	Source 2	Source 3	Vol Up
	Off	Screen	Blank/Mute	Vol Down
KB080A	On	Source 1	Source 2	Source 3
	Off	Source 4	Source 5	Blank/Mute
KB080B	Source 1	Source 2	Source 3	Vol Up
	Off	Disp. On	Source 4	Vol Down
KB080C	Source 1	Source 2	Source 3	Aux Ir Rpt
	Off	Disp. On	Aux IR	Aux Ir Rpt

Source 1	Source 2	Source 3	Vol Up
Off	Source 4	Source 5	Vol Down

Source 1	Source 2	Source 3	Vol Up
Off	Aux IR	Aux IR	Vol Down

Source 1	Source 2	Source 3	Aux IR
Off	Screen	Source 4	Aux IR

Source 1	Source 2	Source 3	Vol Up
Off	TVChan Down	TV Chan Up	Vol Down

Source 1	Source 2	TV Chan Up	Vol Up
Off	Disp. On	TVChan Down	Vol Down

Source 1	Source 2	Freeze	Vol Up
Off	Disp. On	Blank/Mute	Vol Down

Disp. On	Source 1	Source 2	Vol Up
Off	Source 3	Freeze	Vol Down

Source 1	Source 2	Aux IR	Vol Up
Off	Aux IR	Aux IR	Vol Down

Disp. On	Source 1	TV Chan Up	Vol Up
Off	Blank/Mute	TVChan Down	Vol Down

(This suits a TV like Hisense LCD 2, RC5 with a source key that rolls between sources and Tv channel up/dn No OK key is needed.)

Disp. On	Source 1	User A	Vol Up
Off	Source 2	User B	Vol Down

Disp. On	Source 1	Blank/Mute	Vol Up
Off	Source 2	Freeze	Vol Down

Disp. On	Source 1	Source 2	Vol Up
Off	User Relay A	User Relay B	Vol Down

KB0819	Disp. On	Source 1	TV Chan Up	Vol Up
	Off	Source 2	TVChan Down	Vol Down
KB081A	Source 1	Source 2	TV Chan Up	Vol Up
	Off	Blank/Mute	TVChan Down	Vol Down
KB081B	Disp. On	Source 1	Source 2	Vol Up
	Off	Source 3	AV Mute	Vol Down
KB081C	Disp.On	Source 1	Source 2	Source 3
	Off	Source 4	Source 5	Source 6
KB081D	Source 1	Source 2	TV Chan Up	Vol Up
	Off	Source 3	TVChan Down	Vol Down
KB081E	Disp. On	Source 1	Source 2	Vol Up
	Off	Source 3	Source 4	Vol Down
KB081F	Source 1	Source 2	Source 3	Aux IR
	Off	Source 4	Source 5	Aux IR
KB0820	Disp. On	Source 1	Sound Mute	Vol Up
	Off	Source 2	Freeze	Vol Down
KB0821	Disp. On	Source 1	Source 2	TV Ch Up
	Off	Source 3	Source 4	TV Ch Down
KB0822	Source 1	Source 2	Source 3	Vol Up
	Off	User Rly A	Blank/Mute	Vol Down
KB0823	Disp. On	Source 1	Screen	Vol Up
	Off	Source 2	Freeze	Vol Down
KB0824	Disp. On	Source 1	Source 2	Source 3
	Off	Screen U/D	AV Mute	Source 4
KB0825	OnNoSource	StringKeyA	StringKeyB	StringKeyC
	Off	StringKeyD	StringKeyE	StringKeyF

KB0826	Disp. On	Source 1	Blank/Mute	AUX IR
	Off	Source 2	Freeze	AUX IR

Table of 10-key keyboards definitions

KB1001	Source 1	Source 2	Source 3	Source 4	Vol Up
	Off	Screen U/D	Blnk/Mute	Freeze	Vol Down

KB1002	Source 1	Source 2	Source 3	Source 4	Vol Up
	Off	Pixel Align	Blnk/Mute	Freeze	Vol Down

KB1003	Source 1	Source 2	Source 3	TV Ch Up	Vol Up
	Off	Source 4	Blank	TV Ch Down	Vol Down

KB1004	Source 1	Source 2	Source 3	DTV Tuner Ch Up	Vol Up
	Off	Source 4	Blnk/Mute	DTV Tuner Ch Down	Vol Down

KB1005	Source 1	Source 2	Source 3	DVD Pl/Pse	Vol Up
	Off	Source 4	DVD Back	DVD Fwd	Vol Down

KB1006	Source 1	Source 2	Source 3	Source 4	Source 5
	Off	Source 6	Source 7	Source 8	Source 9

KB1007	Disp. On	Source 1	Source 2	Source 3	Source 4
	Off	Source 5	Source 6	Source 7	Source 8

KB1008	Source 1	Source 2	Source 3	Source 4	Vol Up
	Off	Blank	Sound/Mute	Freeze	Vol Down

KB1009	Source 1	Source 2	Source 3	Source 4	Vol Up
	Off	AspectRatio	Mute	Freeze	Vol Down

KB100a	Source 1	Source 2	Source 3	Source 4	Vol Up
	Off	Disp. On	Source 5	Source 6	Vol Down

KB100b	Source 1	Source 2	Source 3	User RelayA	User RelayB
	Off	Source 4	Source 5	User RelayC	User RelayD

KB100c	Source 1	Source 2	Source 3	User RelayA	User Relay B
	Off	Disp. On	Source 4	User RelayC	User RelayD
KB100d	Source 1	Source 2	Source 3	User A	User B
	Off	Source 4	Source 5	User C	User D
KB100e	Source 1	Source 2	Source 3	User A	User B
	Off	Disp. On	Source 4	User C	User D
KB100f	Source 1	Source 2	Blank/Mute	User A	User B
	Off	Disp. On	Screen	User C	User D
KB1010	Source 1	Source 2	Freeze	User A	User B
	Off	Disp. On	Blank/Mute	User C	User D
KB1011	Source 1	Source 2	Source 3	Source 4	Vol Up
	Off	Source 5	Blank/Mute	Freeze	Vol Down
KB1012	Source 1	Source 2	Source 3	Source 4	Source 5
	Off	Source 6	TV Ch Up	TV Ch Down	Blank/Mute
KB1013	Source 1	Source 2	Source 3	Source 4	Vol Up
	Off	Source 5	TV Ch Up	TV Ch Down	Vol Down
KB1014	Source 1	Source 2	Source 3	Source 4	Vol Up
	Off	Source 5	Aux IR	Aux IR	Vol Down
KB1015	Source 1	Source 2	Source 3	Source 4	Aux IR Rpt
	Off	Source 5	Blank	Aux IR	Aux IR Rpt
KB1016	Source 1	Source 2	Source 3	Source 4	Vol Up
	Off	Disp. On	Blank/Mute	Freeze	Vol Down
KB1017	Disp. On	Source 1	Source 2	Source 3	Vol Up
	Off	Blank/Mute	Freeze	Source 4	Vol Down
KB1018	Aux Ir	Aux IR	Aux IR	Aux IR	Aux IR Rpt
	Off	Disp. On	Aux IR	Aux IR	Aux IR Rpt

KB1019	Source 1	Source 2	Source 3	Source 4	Vol Up
	Off	Disp. On	TVChan Up	TVChan Dwn	Vol Down
KB101A	Source 1	Source 2	Source 3	Source 4	Vol Up
	Off	Disp. On	Aux IR	Aux IR	Vol Down
KB101B	Source 1	Source 2	Source 3	Source 4	Vol Up
	Off	Disp. On	Blank	Sound/Mute	Vol Down
KB101C	Source 1	Source 2	Source 3	Source 4	Vol Up
	Off	Disp. On	Blank	Aspect	Vol Down
KB101D	Source 1	Source 2	Source 3	Source 4	Vol Up
	Off	Screen U/D	Blnk/Mute	Source 5	Vol Down
KB101E	Source 1	Source 2	Source 3	Source 4	Vol Up
	Off	RelayA	RelayB	Sound/Mute	Vol Down
KB101F	Source 1	Source 2	Source 3	TVChan Up	Vol Up
	Off	Disp. On	Sound/Mute	TVChan Dwn	Vol Down
KB1020	Source 1	Source 2	Source 3	TVChan Up	Vol Up
	Off	Disp. On	Source 4	TVChan Dwn	Vol Down
KB1021	Source 1	Blnk/Mute	Freeze	Zoom+	Focus+
	Off	Disp. On	Screen U/D	Zoom-	Focus-
KB1022	Source 1	Source 2	Source 3	TV Ch Up	Vol Up
	Off	Disp. On	Source 4	TV Ch Down	Vol Down
KB1023	Source 1	Blnk/Mute	Zoom+	Focus+	Blank
	Off	Freeze	Zoom-	Focus-	Blank
KB1024	Source 1	Source 2	Source 3	Mic Vol Up	Vol Up
	Off	Blnk/Mute	Freeze	Mic Vol Down	Vol Down
KB1025	Source 1	Source 2	Source 3	Aux IR	Vol Up
	Off	Disp. On	Aux IR	Aux IR	Vol Down

KB1026	Source 1	Source 2	Source 3	TV Ch Up	Vol Up
	Off	Source 4	Blank/Mute	TV Ch Down	Vol Down
KB1027	Source 1	Source 2	Source 3	Aux IR	Vol Up
	Off	Aux IR	Blnk/Mute	Aux IR	Vol Down
KB1028	Source 1	Source 2	Source 3	TV Ch Up	Vol Up
	Off	Disp. On	Blnk/Mute	TV Ch Down	Vol Down
KB1029	Source 1	Source 2	Source 3	Source 4	Vol Up
	Off	Blank	Mute	Freeze	Vol Down
KB102A	Source 1	Source 2	Source 3	Source 4	Aux IR Rpt
	Off	Disp. On	Source 5	Source 6	Aux IR Rpt
KB102B	Source 1	Source 2	Source 3	Aux IR	Vol Up
	Off	Screen U/D	Blnk/Mute	Aux IR	Vol Down
KB102C	Source 1	Source 2	Source 3	Zoom+	Focus+
	Off	Disp. On	Blnk/Mute	Zoom-	Focus-
KB102D	Freeze	Source 1	Source 2	User RelayA	Vol Up
	Off	Source 3	Source 4	User RelayB	Vol Down
KB102E	Blank/Mute	Source 1	Source 2	User RelayA	Vol Up
	Off	Source 3	Source 4	User RelayB	Vol Down
KB102F	Source 1	Source 2	Source 3	TVChan Up	Vol Up
	Off	Disp. On	Sound/Mute	TVChan Dwn	Vol Down
KB1030	Source 1	StringKeyA	StringKeyB	StringKeyC	Vol Up
	Off	StringKeyD	StringKeyE	StringKeyF	Vol Down
KB1031	On	Source 1	Source 2	Source 3	User 1
	Off	Screen U/D	Blnk/Mute	Freeze	User 2
KB1032	Source 1	Source 2	Source 3	Aux IR	Vol Up
	Off	Aux IR	Source 4	Aux IR	Vol Down

KB1033	Disp On	Source 1	Source 2	Aux IR	Vol Up
	Off	Aux IR	Source 3	Aux IR	Vol Down
KB1034	Disp. On	Source 1	Source 2	TV Ch Up	Vol Up
	Off	Source 3	Source 4	TV Ch Down	Vol Down
KB1035	OnNoSource	StringKeyA	StringKeyB	StringKeyC	Vol Up
	Off	StringKeyD	StringKeyE	StringKeyF	Vol Down
KB1036	Disp. On	Source 1	Source 2	StringKeyA	Vol Up
	Off	Source 3	Source 4	StringKeyB	Vol Down
KB1037	Disp. On	User KeyC	User KeyD	User KeyA	Vol Up
	Off	User KeyE	User KeyF	User KeyB	Vol Down
KB1038	On	Source 1	Source 2	Source 3	Source 4
	Off	AV Mute	Source 5	Source 6	Source 7
KB1039	Source 1	Source 2	Source 3	Source 4	Vol Up
	Off	Disp. On	User RelayA	User RelayB	Vol Down
KB103A	Disp. On	Source 1	Source 2	User KeyA	Vol Up
	Off	AV Mute	Source 3	User KeyB	Vol Down
KB103B	Disp. On	Source 1	Source 2	Source 3	Aux IR Rpt
	Off	Source 4	Source 5	Source 6	Aux IR Rpt
KB103C	Disp On	Source 1	Source 2	Aux IR	Vol Up
	Off	Aux IR	Screen U/D	Aux IR	Vol Down
KB103D	On	Source 1	Source 2	Vol Up	User RelayA
	Off	Source 3	Source 4	Vol Down	User RelayB
KB103E	Disp. On	Source 1	Source 2	Source 3	Aux IR Rpt
	Off	Source 4	Source 5	AV Mute	Aux IR Rpt
KB103F	Disp. On	Source 1	Source 2	User Key A	Vol Up
	Off	Screen U/D	Source 3	User Key B	Vol Down

KB1040	Disp. On	Source 1	Source 2	Source 3	Source 4
	Off	Source 5	Source 6	Source 7	Source 8
KB1041	On	Source 1	Source 2	User Key A	Screen U/D
	Off	Source 3	Source 4	User Key B	User RelayB
KB1042	Disp. On	Source 1	Source 2	Freeze	Vol Up
	Off	Screen U/D	Source 3	AV Mute	Vol Down
KB1043	Disp On	Source 1	Source 2	Aux IR	Aux IR Rpt
	Off	Aux IR	Source 3	Aux IR	Aux IR Rpt